 


Food Service Cabinet

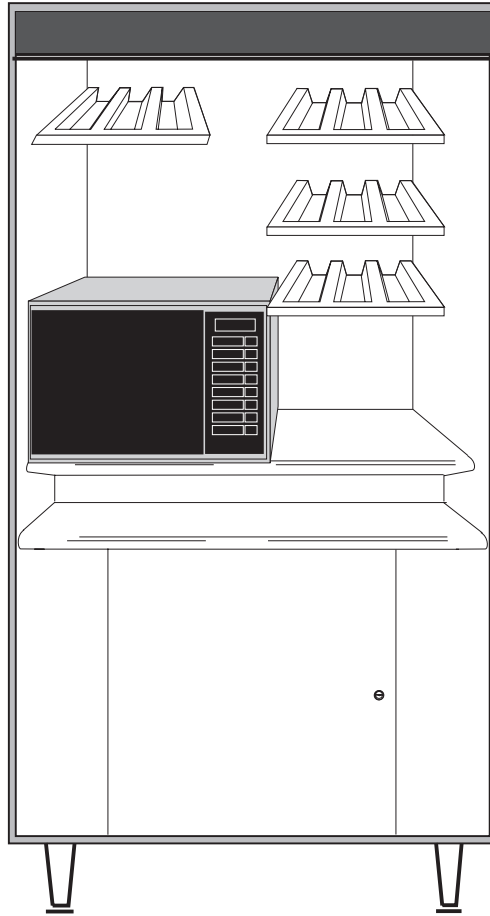

Set-Up Guide

Copyright © 3-98

8390006



CRANE- National Vendors

This merchandiser has been engineered to our own rigid safety and performance standards. It has been designed to comply with sanitation and health guidelines recommended by the Automatic Merchandising Health-Industry Council (AMHIC) and it conforms with all other NAMA safety recommendations.

This merchandiser has been manufactured in accordance with the safety standards of both Underwriter's Laboratories and the Canadian Standards Association. To maintain this degree of safety and to continue to achieve the level of performance built into this merchandiser, it is important that installation and maintenance be performed so as to not alter the original construction or wiring and that replacement parts are as specified by the National Vendors Parts Department.

Table of Contents

GENERAL INFORMATION	2
Introduction.....	2
Unpacking and Inspection	2
The Location's Electrical Supply	2
INSTALLATION	2
CONFIGURING YOUR FOOD SERVICE CABINET	3
CLEANING THE FOOD SERVICE CABINET	5
MINOR MAINTENANCE.....	5

Food Service Cabinet Setup Guide

SPECIFICATIONS

SIZE:

HEIGHT: 72" (183 cm)
WIDTH: 38.13" (96.8 cm)
DEPTH: 27.5" (69.8 cm)
WEIGHT: 290 lbs. (131 kg)

 
STYLING:

Imperial Crown

**POWER
REQUIREMENTS:**

110-120 Volts AC; 60 Hertz; 0.3 Amps
or
230 Volts AC; 50 Hertz; 0.15 Amps
(For operating the fluorescent light)

EXTRA COST OPTIONS: Base Plate Assembly

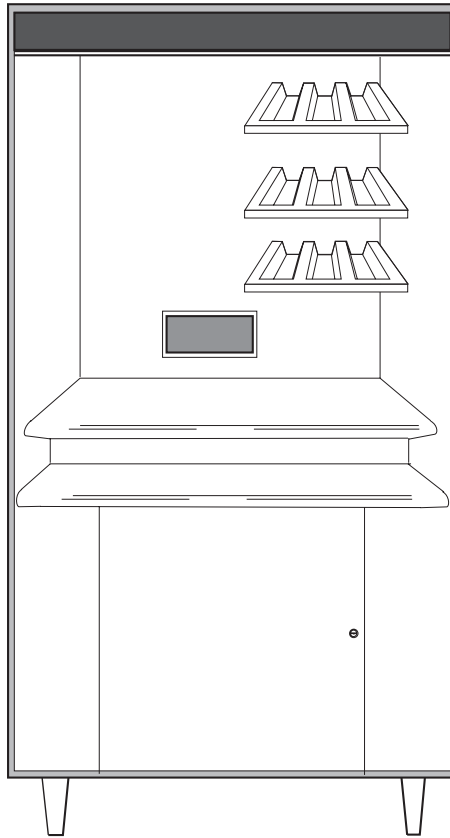

Food Service Cabinet Setup Guide

GENERAL INFORMATION

Introduction

Your National Vendors food service cabinet features styling that is compatible with National Vendors merchandisers. It has an ample storage compartment with a locking door for added security.

Unpacking and Inspection

1. Locate the envelope taped to the upper shelf. Remove the key from the envelope and open the cabinet door.
2. Make sure the following items are in the storage area:
 - a. Base plate (if equipped)
 - b. Electrical cover plate
3. Inspect the food service cabinet for dents, scratches, or other damage resulting from improper handling. If damage is present, file a claim immediately with the delivery carrier.
4. Remove the food service cabinet from its shipping base and place it on a reasonably level surface.

The Location's Electrical Supply

Your food service cabinet has a service cord for the country of use and is terminated in a grounding type plug. The wall receptacle used for this merchandiser must be properly polarized, grounded and of the correct voltage. Operating the cabinet from a source of low voltage will **VOID YOUR WARRANTY**. Each cabinet should have its own electrical circuit, and that circuit should be protected with a circuit breaker or fuse conforming to local regulations.

1. **Voltage Check** - Place the leads of a voltmeter across the LINE (LIVE) and NEUTRAL terminals of the wall receptacle. The voltmeter should indicate 110-130 volts ac for 120 volt, 60 Hz locations, or 220- 240 volts ac for 230 volt, 50 Hz locations.
2. **Polarity Check** - Place the leads of a voltmeter across the LINE (LIVE) and GROUND terminals of the wall receptacle. The voltmeter should indicate 110-130 volts ac for 120 volt, 60 Hz locations, or 220- 240 volts ac for 230 volt, 50 Hz locations.
3. **Noise Potential Check** - Place the test leads of a voltmeter across the NEUTRAL and GROUND terminals of the wall receptacle. The meter should indicate 0 volts ac. A measurement greater than 1.5 - 2.0 volts ac could result in problems for the merchandiser's electronic circuitry caused by electrical noise.

Any deviation from these requirements could result in unreliable performance from your cabinet.

INSTALLATION

WARNING

 
Make sure the food service cabinet is properly leveled on a flat, solid, stable floor or base foundation. **IF THIS IS NOT DONE, PERSONAL INJURY AND/OR DAMAGE TO EQUIPMENT MAY RESULT!**

1. Move the food service cabinet to the desired location. Adjust the leg levelers to level the cabinet left-to-right and front-to-rear. Use a spirit level to check for proper leveling.
2. For installing your cabinet "bank style" between multiple merchandisers:
 - a. Position the first merchandiser/cabinet in the location, or at the highest spot if the floor is not level. Extend the leg levelers only as required to level the merchandiser/cabinet.
 - b. Position and level the remaining merchandisers.
3. Plug in the food service cabinet. The light should come on.

Food Service Cabinet Setup Guide


CONFIGURING YOUR FOOD SERVICE CABINET

Your food service cabinet has room for two microwave ovens and up to three condiment/utensil holders, or one microwave oven and up to four condiment/utensil holders. Refer to the illustrations on these pages and set up your food service cabinet any way it is convenient for you.


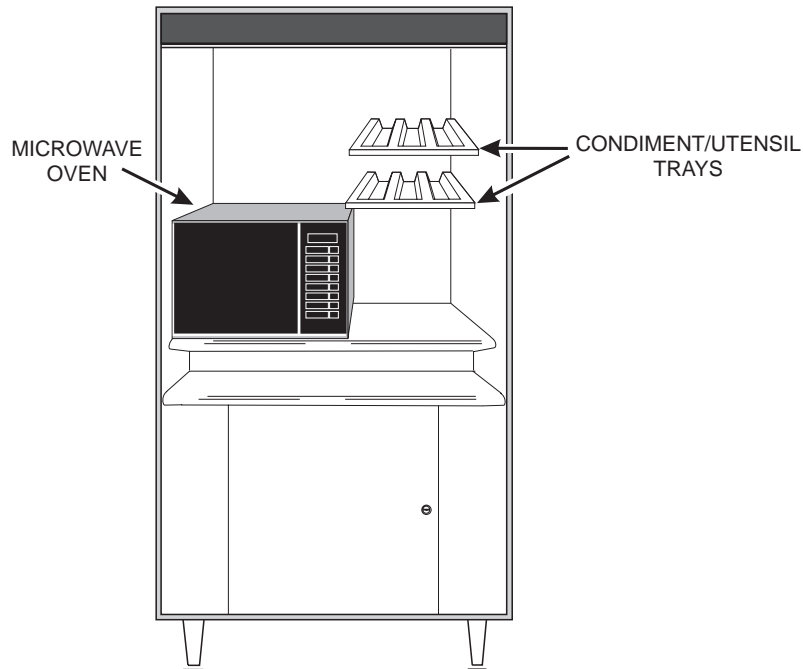


The food service cabinet comes with a rear opening for the microwave oven power cords. If you are not going to use a microwave oven, remove the edge guards from around the opening, exposing two holes. Mount the cover plate and secure in place with two screws as shown.

 As you can see, there are numerous combinations of microwave ovens and condiment/utensil trays you can use. To install the condiment/utensil trays, hold them in place and secure with screws from the front of the cabinet.

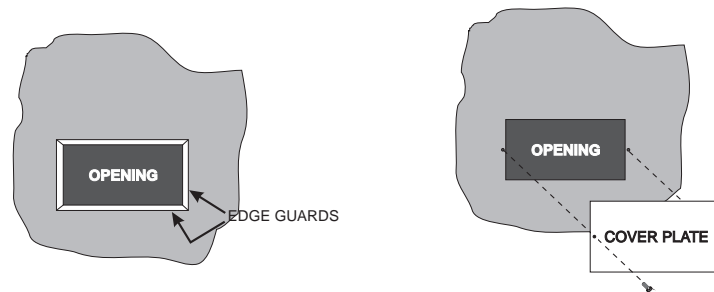

Food Service Cabinet Setup Guide

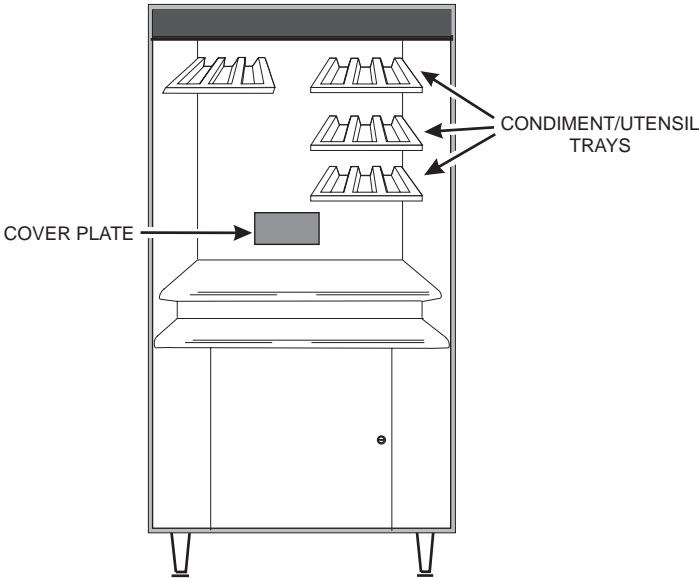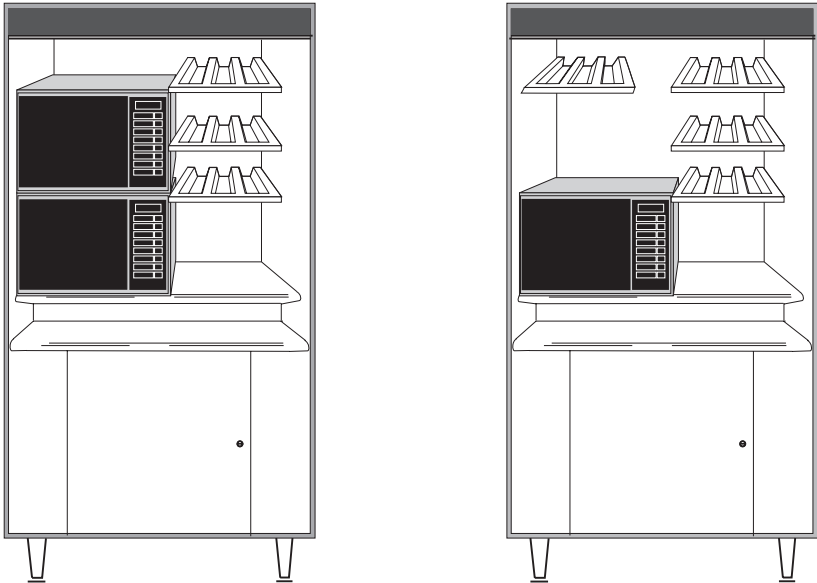  


CLEANING THE FOOD SERVICE CABINET

Clean the food service cabinet with warm water and a mild detergent. Rinse thoroughly with clean water and wipe it dry with a soft cloth. You can use a standard stainless steel polish to clean the shelves.

MINOR MAINTENANCE

To change the fluorescent tube and/or the starter, proceed as follows:

 1. Unplug the food service cabinet from its power source.
2. Remove the two screws securing the light cover. Remove the light cover.
3. Remove the fluorescent tube by turning it about 1/2 turn in either direction, then pulling it straight out of its sockets.
4. Remove the starter by turning it counterclockwise 1/4 turn, then pulling it straight out of its socket.
5. Replace the fluorescent tube and/or the starter.
6. Replace the light cover.
7. Plug the food service cabinet into its power source.

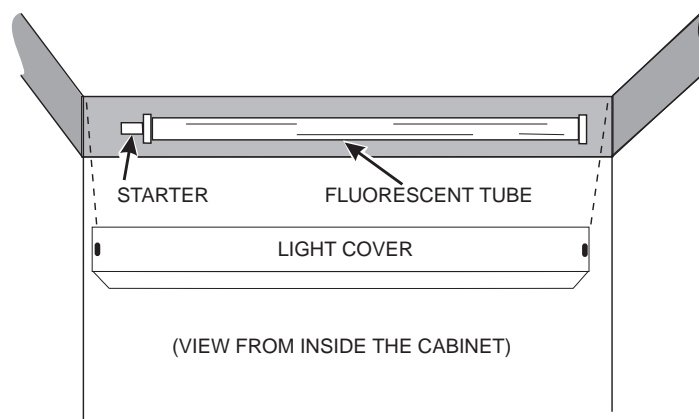

This Merchandiser is warranted for one (1) year against defective parts and workmanship. Any part or parts which are proven to be defective within one (1) year of the date of shipment will be repaired or replaced free of charge when the defective part is returned, with transportation charges prepaid, to the destination designated by the National Vendors Warranty Department.

This warranty applies only to the original purchaser of the Merchandiser and is null and void if the Merchandiser is sold during the period of warranty.

This warranty does not apply to a) electrical components, wiring, or circuits and/or for all mechanical parts or assemblies damaged as a result of operating the Merchandiser at other than the design voltage and frequency specified on the Electrical Rating Tag, or b) in event of vandalism, fire or negligence, or c) incandescent lamps, neon lamps, fluorescent lamps, ballasts, starters or other expendable items or d) when other manufactured components are installed in National Vendors Merchandisers. National Vendors is not responsible for any cost of service rendered or repairs made by customer or its agents on Merchandiser or parts unless authorization to incur such expense has been given in writing by National Vendors prior to incurring such expense.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NATIONAL VENDORS SHALL NOT BE RESPONSIBLE FOR CONSEQUENTIAL OR PUNITIVE DAMAGES. National Vendors neither assumes nor authorizes any person to assume for it any obligation or liability in connection with the sale of said equipment or any part thereof.

**National Vendors
A Division of CRANE CO
12955 Enterprise Way
Bridgeton, MO 63044**